
## Photoelectric Standard Sensors **BOS 18M** Laser through-beam sensor


## M18 Metal Laser **Through-beam Sensor**

## Accuracy diagram

Smallest detectable part size as a function of range.

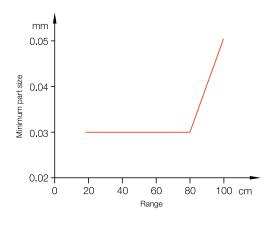



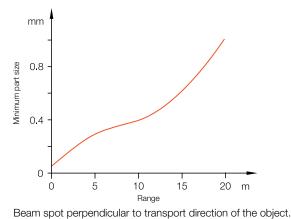


Detection range									
PNP	NO/NC	Receiver		Part number					
				Part number					
PNP	NC	Receiver		Part number					
				Part number					
PNP		Emitter		Part number					
				Part number					
Supply voltage U <sub>B</sub>									
Output current									
No-load supply current I <sub>0</sub> max.									
Switching type									
Polarity reversal/short-circuit protected									
Settings									
Emitter, light type									
Wavelength									
Laser class									
Response time									
Switching frequency f									
Degree of protection as per IEC 60529									
Ambient temperature T <sub>a</sub>									
Permissible ambient light									
Materia	al			Housing					
				Optical surface					
Connection									


Ordering codes on pages 54-56.

Туре

## Wiring diagrams

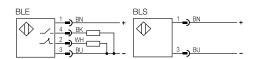



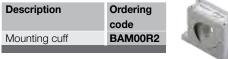

More mechanical accessories: You can find a large selection of mounting components of all types, such as clamping holders, mounting brackets, and the Balluff mounting system BMS, in our Accessory Product Line catalog.



(please order separately)



Size	Design	Cable material	Color	Length	Ordering code
M12, 4-pin	Straight	PUR	Yellow	5 m	BCC05FE
M12, 4-pin	Straight	PVC	Yellow	2 m	BCC05FF
M12, 4-pin	Angled	PUR	Yellow	2 m	BCC05TA
M12, 4-pin	Angled	PVC	Yellow	2 m	BCC05TF

Connectors without LED are suitable for PNP and NPN sensors.

BALLUFF 92