The next generation of charger ...because life doesn't stop

- The lightest most versatile charger
- Emergency power in your pocket
- 10 times more powerful than a conventional battery
- Up to 1 year standby charge



The powermonkey classic is the essential travel companion providing portable power for your gadgets when you need it most.

Imagine you're on an important business trip and you've left your mobile phone charger at home, or trekking through Thailand about to take that life-defining picture and your camera dies ... avoid nightmare scenarios like these with the powermonkey classic's reserve power supply.

Small, agile, tough and powerful, the revolutionary powermonkey classic can be left in your bag, car or desk and will be ready to provide you with emergency power when you need it most.

To keep the powermonkey classic at full strength just top up the supply with one of the included mains charger and make sure you have power wherever you are in the world.



Each kit contains:

- 1 x powermonkey classic unit
- Universal mains charger which will work in over 150 countries and has interchangeable heads for: UK (1), Australia (2), USA/Japan/China (3), and Europe (4)
- Tip pack

Use powermonkey classic to power up these devices:

- Most mobile phones
- Digital cameras with DC in socket; max 5v
- Apple iPods
- Sony PSP
- Blackberry
- MP3/MP4
- Sat navs using mini USB tip



How to use your powermonkey classic:

To charge your digital devices:

- Switch your powermonkey classic on by sliding the rubberised button to the on position. The green LED will flash.
- If the red LED displays, your powermonkey classic needs to be recharged. See instructions below.
- Select appropriate tip for your digital device and attach to the powermonkey classic output cable or use the standard Nokia tip already attached to the output cable. If necessary tip is not included, visit www.powertraveller.com
- Connect powermonkey classic output cable to your digital device through it's standard charging socket. When device is fully charged, remove powermonkey
- When not in use, switch the rubberised button to the off position to conserve power.

Maximum reserve power available:

All iPods - 40 hours Mobile phones – 96 hours Digital cameras - 1600 pictures Two-way radios – 24 hours PSPs - 5 hours MP3/MP4s - 6 hours PDAs – 48 hours

To recharge your powermonkey classic:

- Mains charging
- into the charging socket
- · Remove from mains charger

classic using the USB cable provided Charging times:

Mains charging: To fully charge your powermonkey classic from the mains takes 3.5 hours.

Safety features: Short-circuit protection

- Over-discharging protection
- Counter-current protection

Over-charging protection




Intelligent charging technology







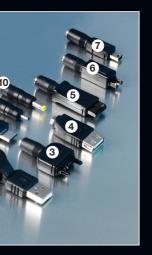

Tip pack includes:

• iPod charging tip (1)

• Female USB tip (4)

• LG Chocolate tip (5)

• Samsung G600 tip (8)

Micro USB tip (6)

• Mini USB tip (7)

• Retractable USB charging cable (2) • Sony Ericsson wide 750i tip (3)

• Mini Nokia DC2.0 tip (9) • PSP & digital camera DC 4.0 tip (10)

Other tips are available for most handheld devices not mentioned above. Visit www.powertraveller.com

You can charge your powermonkey classic in two ways:

Ensure powermonkey classic is switched off
Connect mains charger to the powermonkey classic When charging the red LED will light up
When fully charged the green LED will light up

USB charging If you have a laptop or another device with a USB socket, it is possible to recharge your powermonkey

USB charging: To fully charge your powermonkey classic using the USB cable takes 6 hours.



powermonkey classic parameters:

- Battery Capacity: 2200mAh
- Input Interface: DC3.5 x 1.1
- Input Voltage: 5v 500mA
- Output Interface: DC3.5 x 1.1
- Output Voltage: 4.5~5.5v
- Output Max Current: 1.2A
- Colour: silver, black, pink, blue or purple
- Complete Kit Weight: 70g
- Dimensions: 88x39x37mm

vide mains charger approvals:







Powertraveller is proud to be supporting the David Shepherd Wildlife Foundation - saving critically endangered mammals in the wild.



Designed and developed in the UK







M is the trac ered in the UK and Europe

For customer support please email: support@powertraveller.com

Powertraveller Limited

8 Delta Park, Wilsom Road Alton, Hampshire GU34 2RQ, UK t +44 (0) 1420 542980 info@powertraveller.com

www.powertraveller.com

